

ROADVISION™

INSTALLATION INSTRUCTIONS RSM5104 SERIES

WIRING INSTRUCTIONS

POSITIVE VDC (FUSED @ 3A)

RED

NEGATIVE GROUND

BLACK

FLASH PATTERN SELECT AND SYNCHRONISATION

YELLOW

ALTERNATE FLASH

GREEN

SELECTING FLASH PATTERN


1. Momentarily apply +VDC to Yellow wire, once for next pattern.
2. Applying +VDC for 5 seconds to Yellow wire reset to flash pattern #1.

SIMULTANEOUS FLASH

1. Set all lights to the same flash pattern
2. Connect all the Yellow wires together and lights will flash simultaneously.


ALTERNATE FLASH

1. Set all lights to the same flash pattern
2. Connect Yellow wires together.
3. Connect Green wires from alternate lights only to +VDC (red wire) and lights will flash alternately.

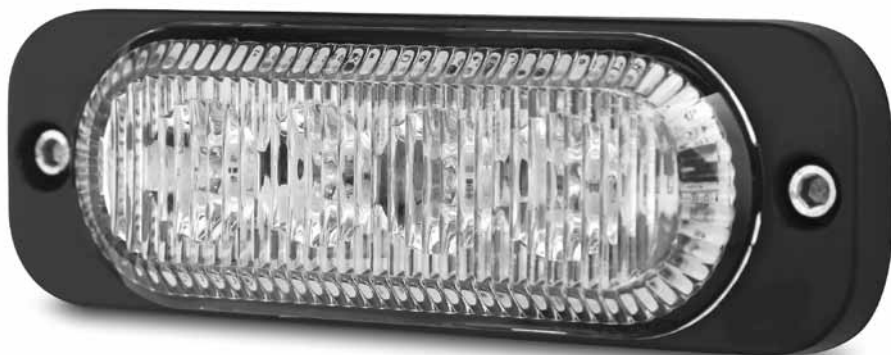

SPECIFICATIONS

BASE	ALUMINIUM
LENS	POLYCARBONATE
LEDS PER HEAD	4 X 3W
VOLTAGE	10-30VDC
MAX CURRENT DRAW	1.0A @ 12VDC / 0.5A @ 24VDC
MAX POWER	12W
FLASH PATTERNS	10
COLOURS	AMBER, WHITE
DIMENSIONS	101 x 32 x 14MM
MOUNTING CENTRES	89MM

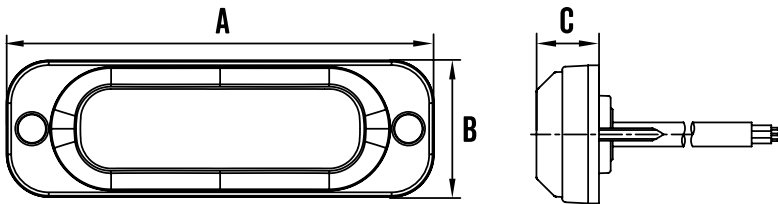

FLASH PATTERNS

1	Random	6	Quintuple (All)
2	Single (Split)	7	Triple (Split)
3	Double (Split)	8	Single (All)
4	Quintuple (Split)	9	Quintuple (All)
5	Triple (All)	10	Single-Quad (Split)



- Only a qualified auto-electrician should install this product. Do NOT install this product if unsure.
- Failure to use specified installation parts or hardware will void the product warranty.
- For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made.
- Do not install and/or operate this safety product unless you have read and understand the safety information contained in this manual.

IMPORTANT! THIS UNIT IS A SAFETY DEVICE, AND IT MUST BE CONNECTED TO ITS OWN SEPARATE, FUSED POWER POINT TO ASSURE ITS CONTINUED OPERATION SHOULD ANY OTHER ELECTRICAL ACCESSORY FAIL.